
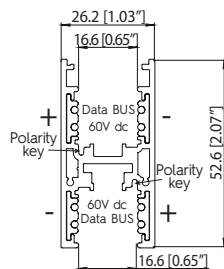
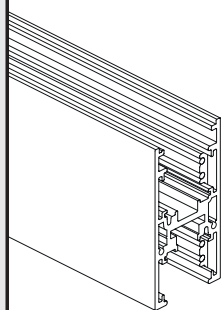


ST7-E ST9-E



MULTISYSTEM
evo

1 - 9500-.../...-ST7-E



CODE	L mm [ft]	
9500-1/...-ST7-E	1000 [3.28']	
9500-2/...-ST7-E	2000 [3.28']	
9500-3/...-ST7-E	3000 [3.28']	


1 - 9500-.../...-ST9-E

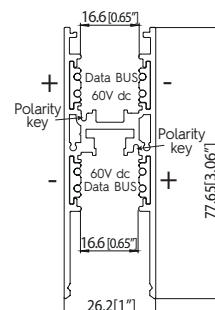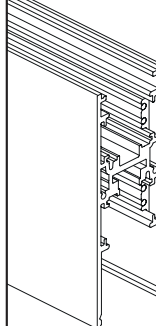



CODE	L mm [ft]	
9500-1/...-ST9-E	1000 [3.28']	
9500-2/...-ST9-E	2000 [3.28']	
9500-3/...-ST9-E	3000 [3.28']	

2 - USE


Suspended

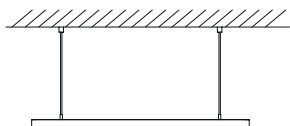



3 - FIXING

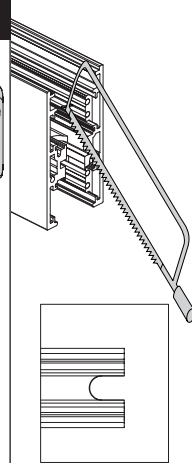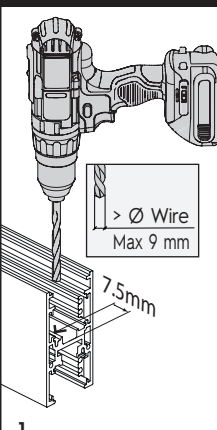

With clamps




2

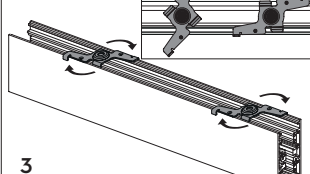
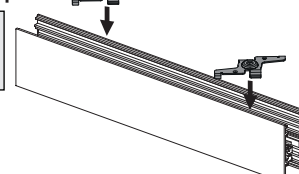


3




With brackets





2

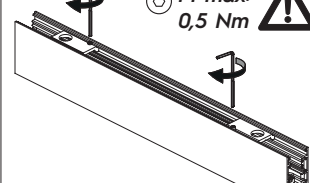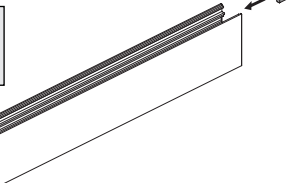


3

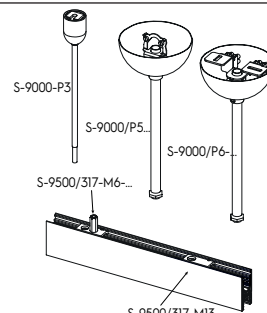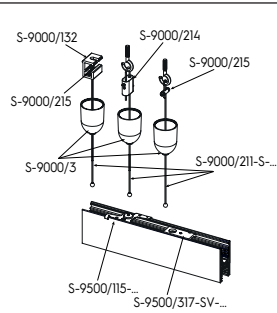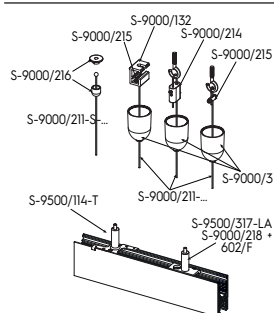

MAX LOAD

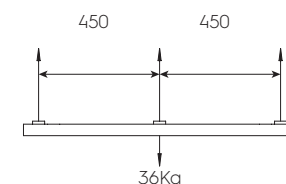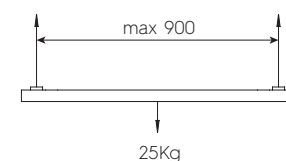

DISTRIBUTED LOAD

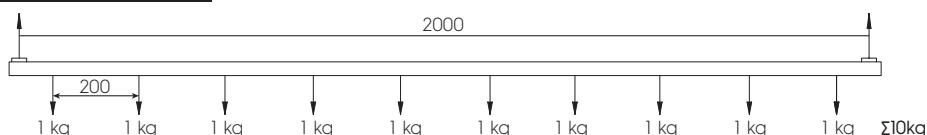

POLARITY!

1	2-3
9501-S-KL...	9501-S-KR...
9501-S-KR...	9501-S-KL...

4


9501-S-...

SEE ADAPTERS
WIRING
INSTRUCTIONS!


9501-S-...

9501-S-...


5

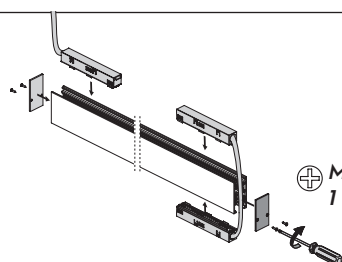


6

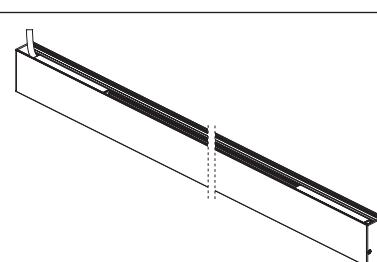


4 - 9503...

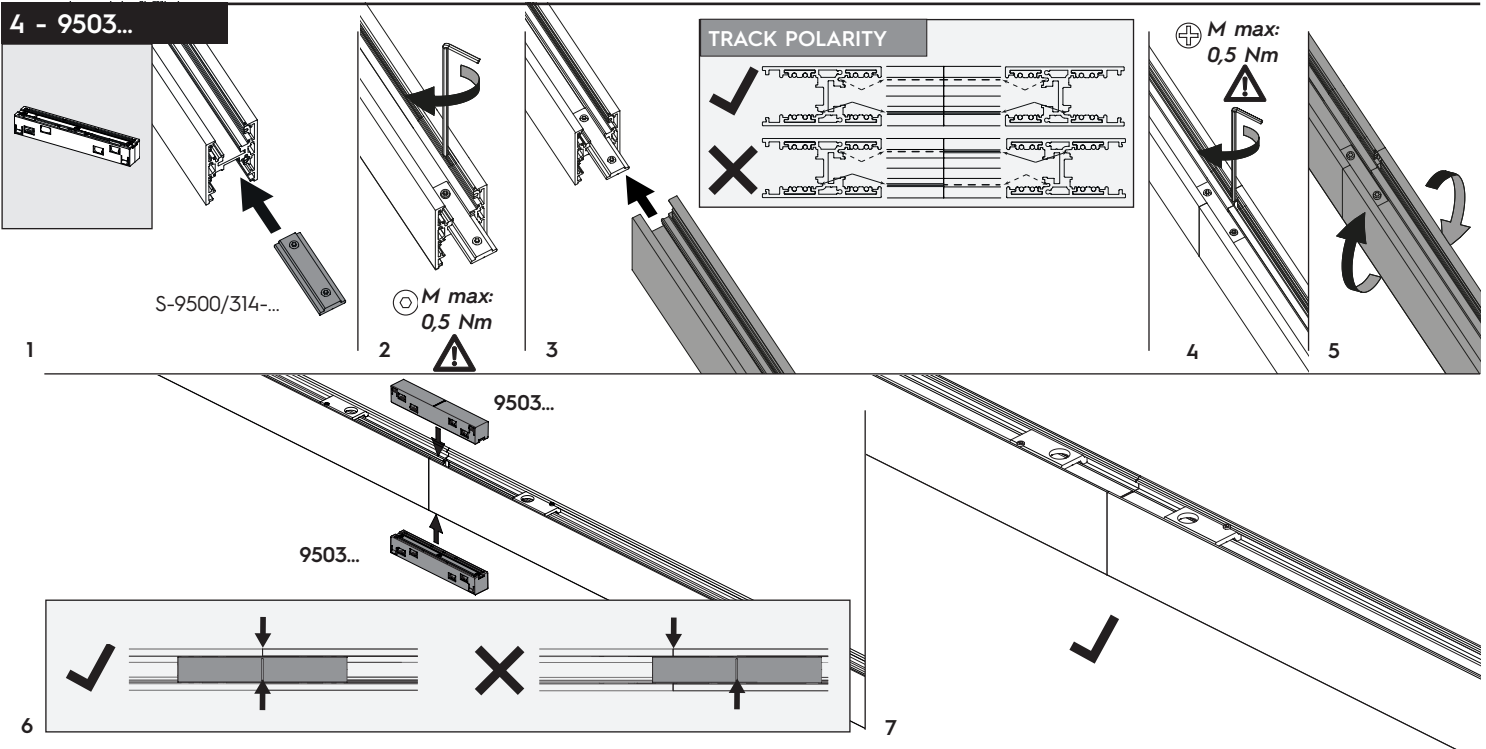

5 - CUTTING

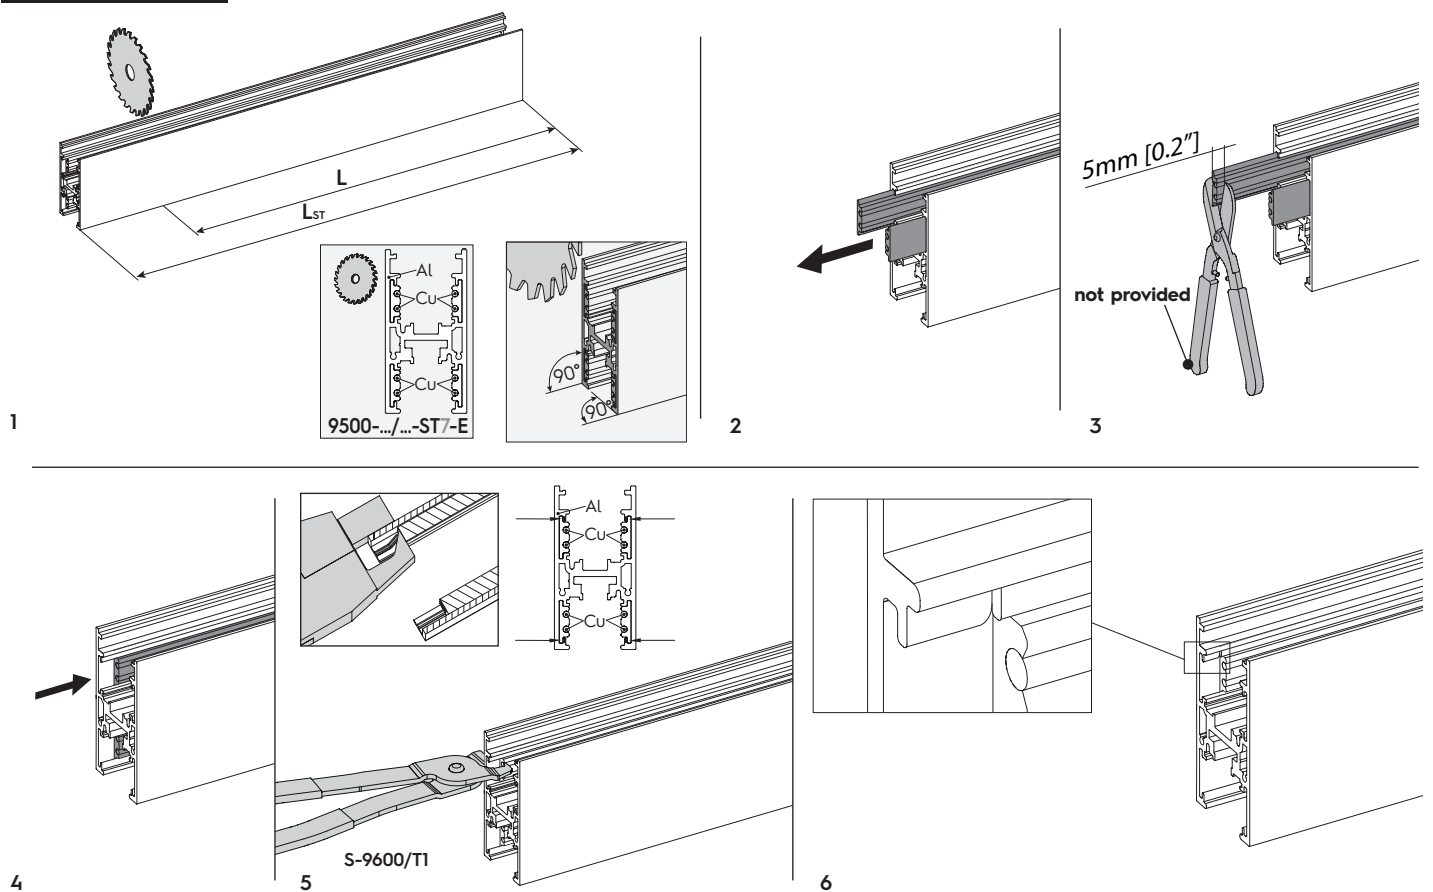


6 - 9501-S/...-E

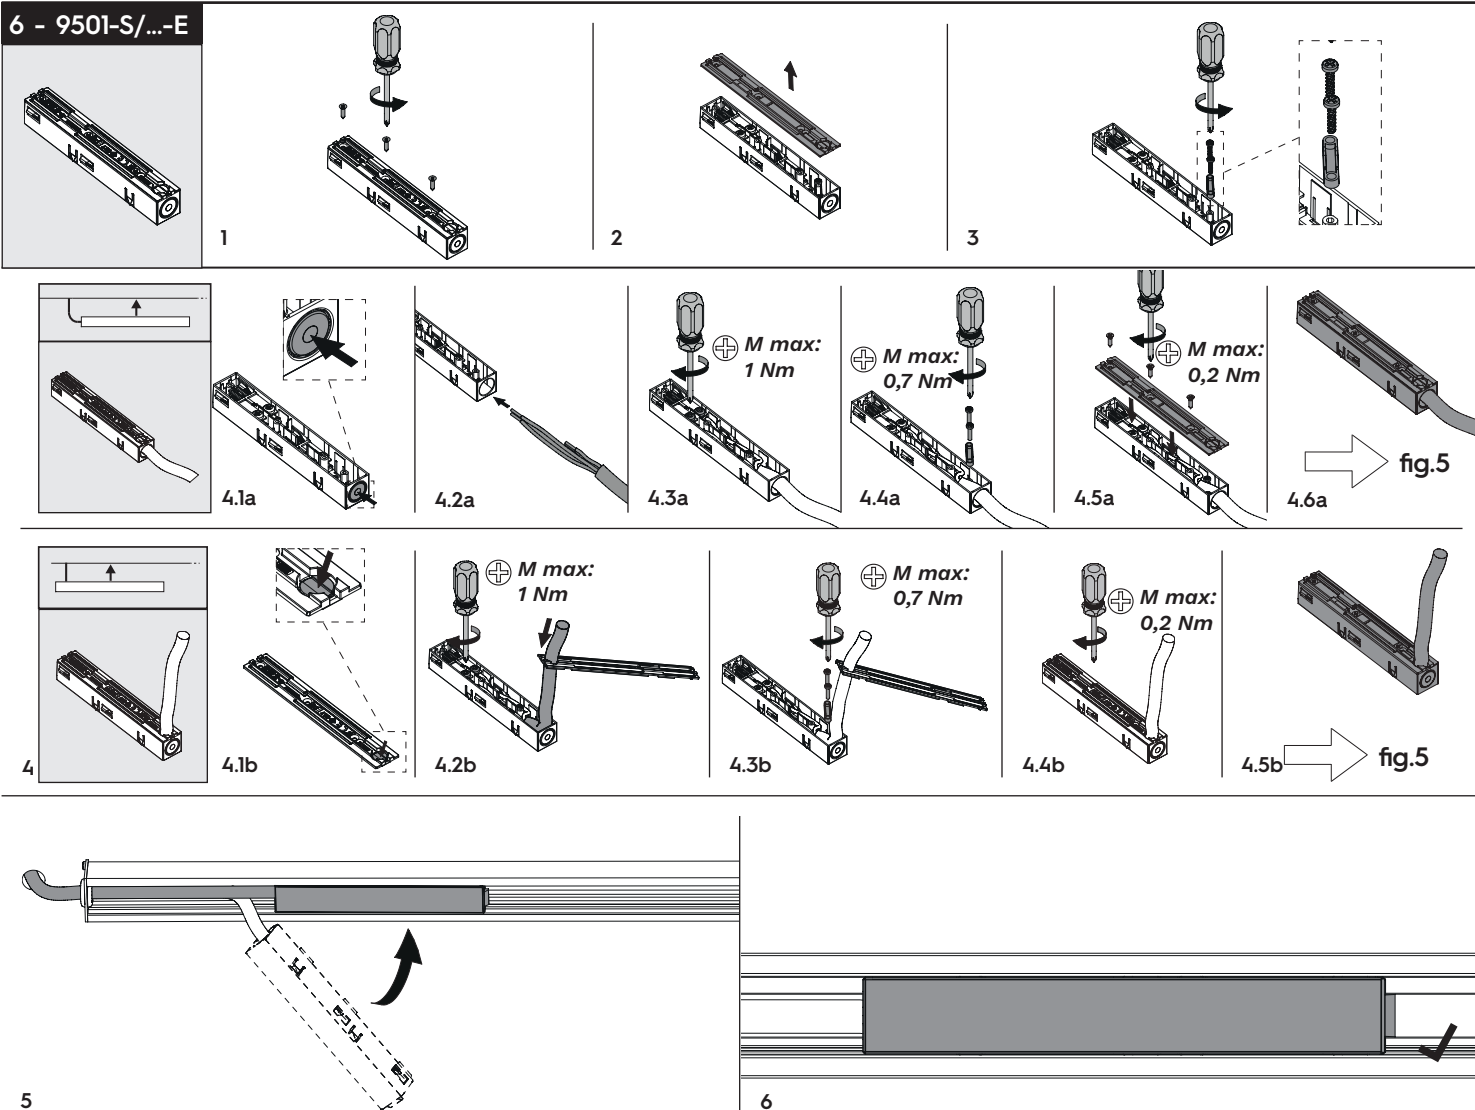



6 - S-951/...-ST9

Polyamide joint


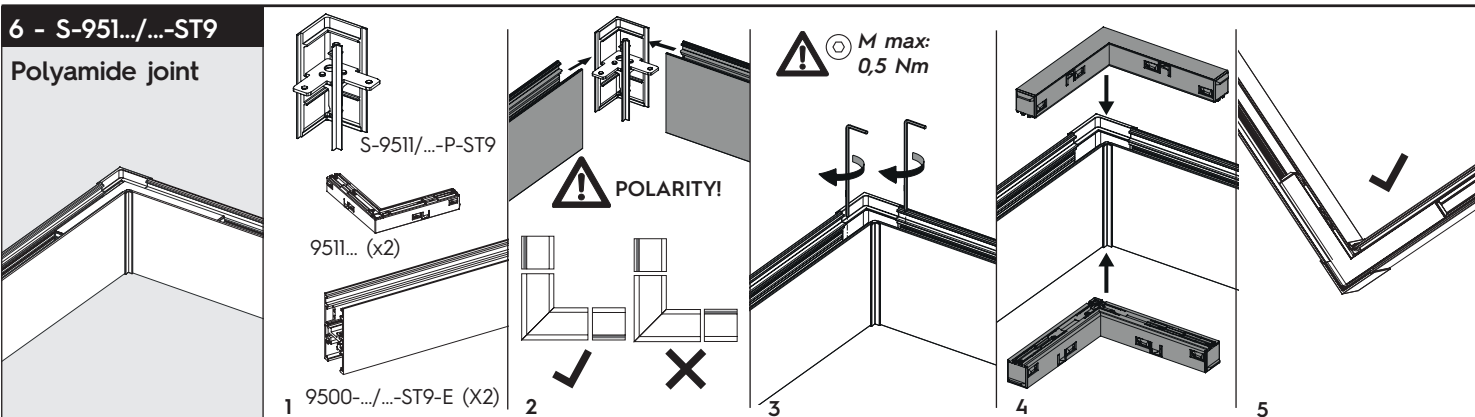


S-951/...-P-ST9


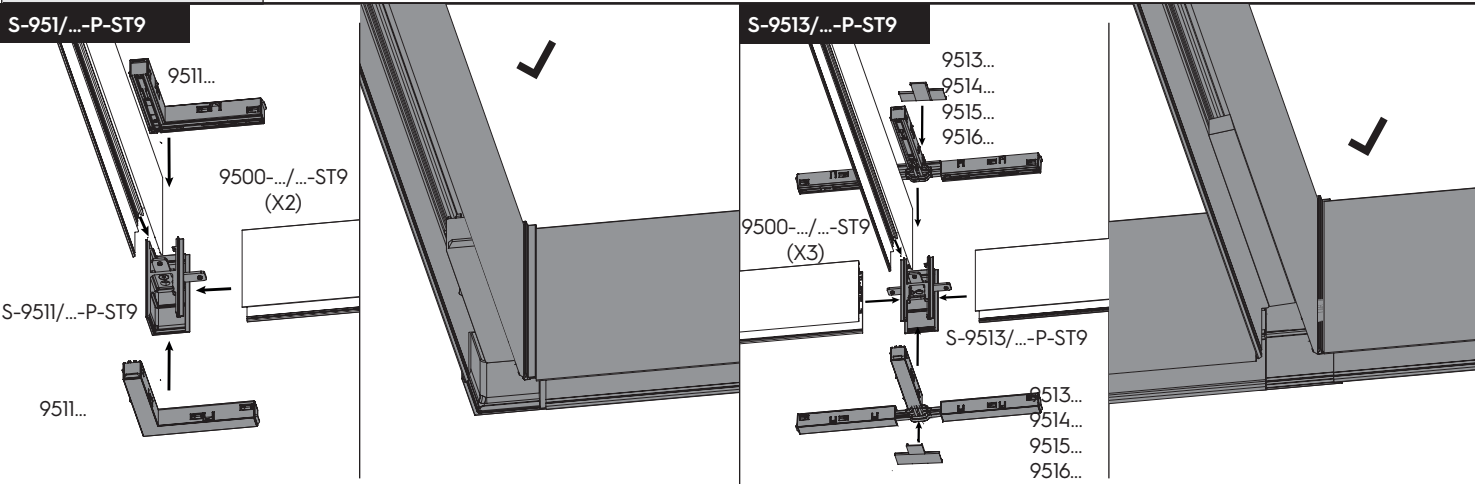


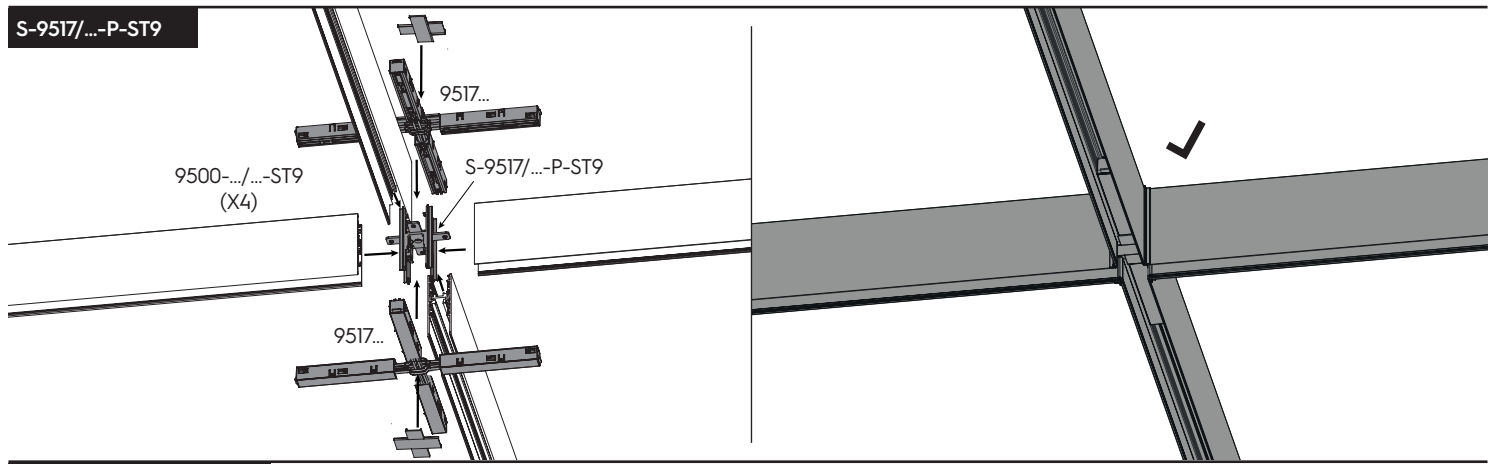

7 - 90° ANGLE

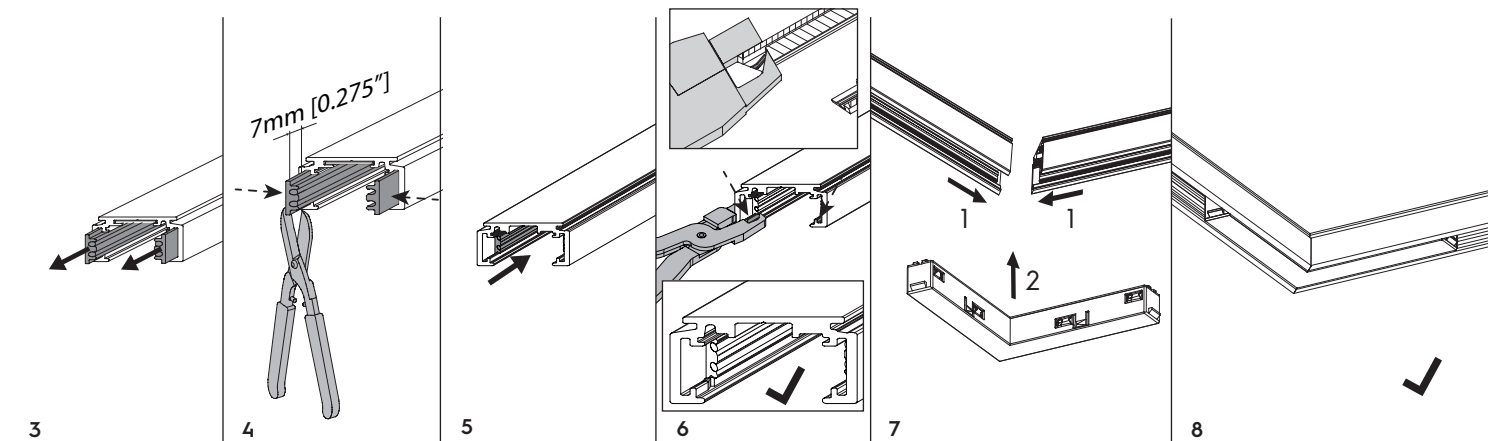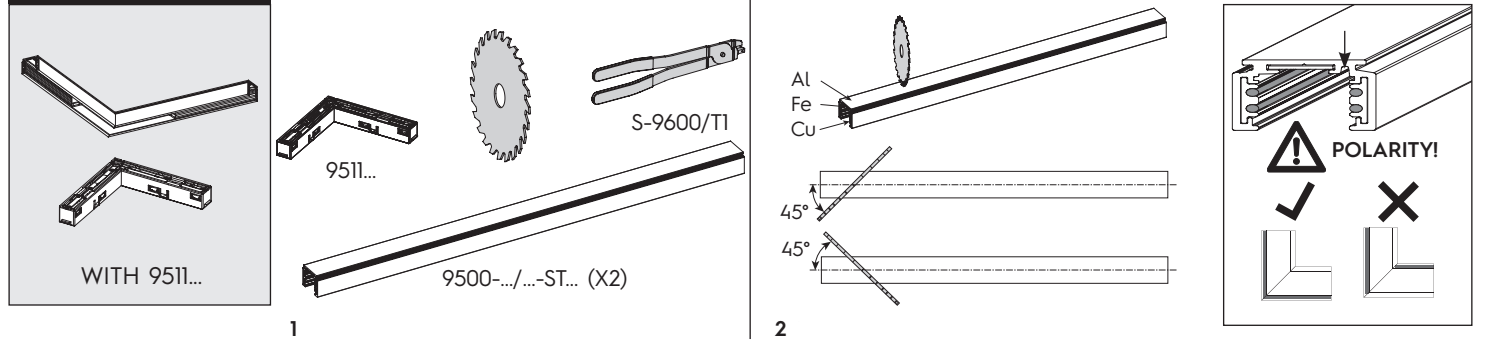



8 - ≠ 90° ANGLE

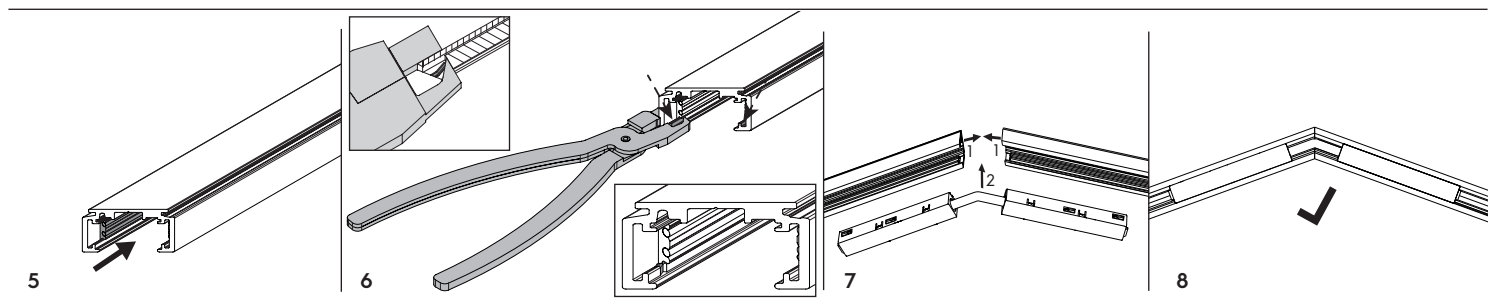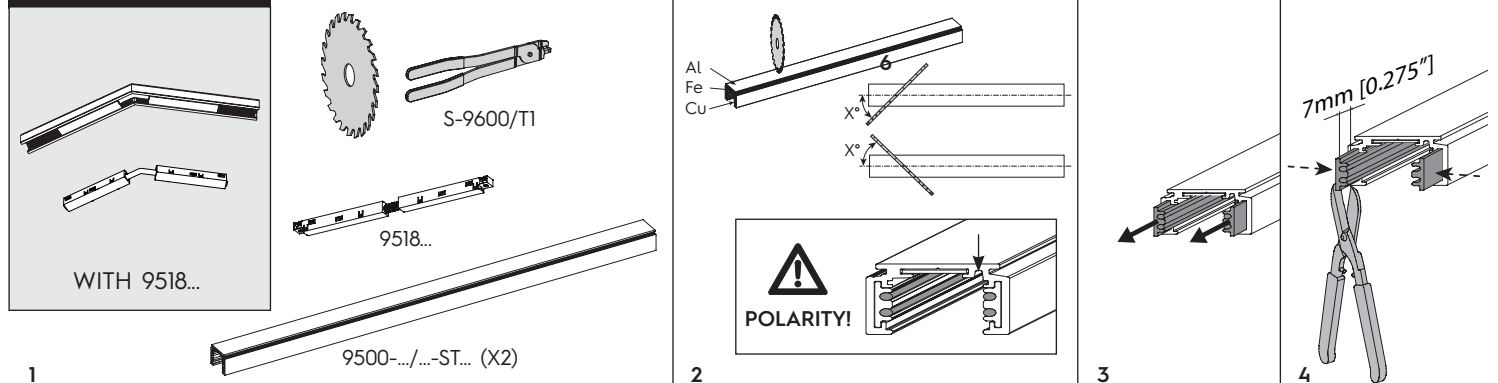


9 - WALL CEILING 90° ANGLE




1

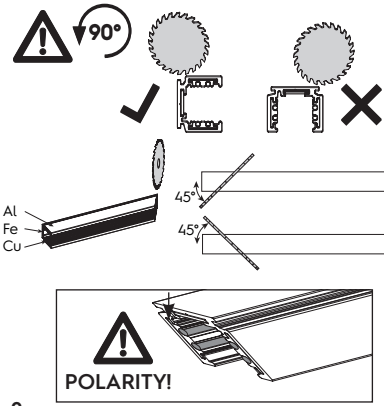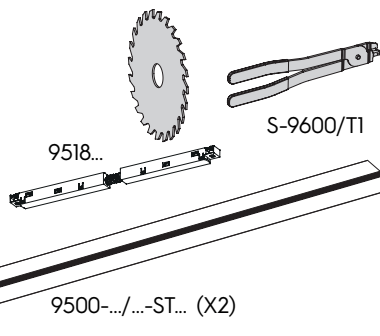


2

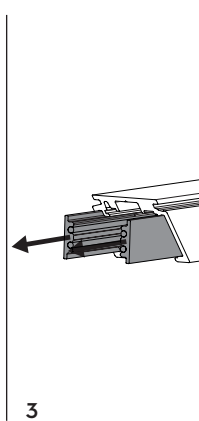


3

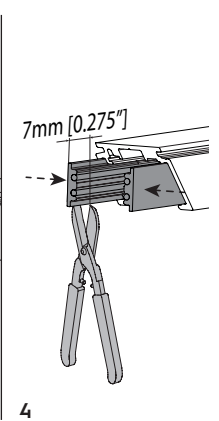


4

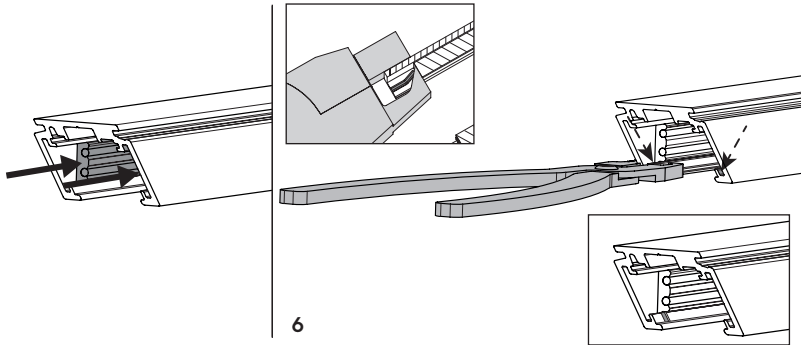


5

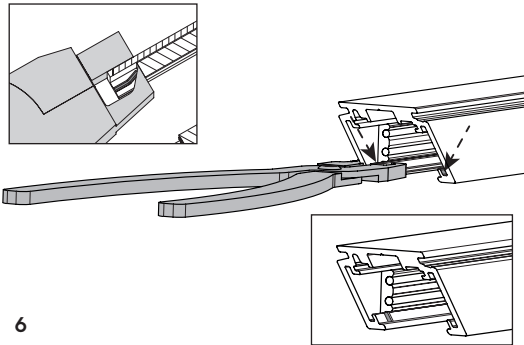

6

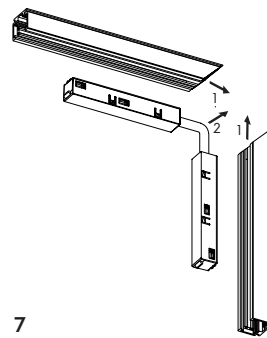

7

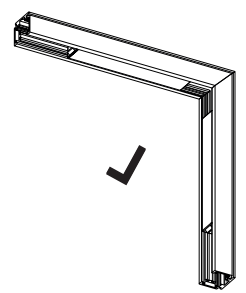

8